


### Resetting the Controller:

**Important: The reset will clear all programming and settings.**

Disconnect the battery from the controller.  
Disconnect the AC power from the controller.

Simultaneously press the **Previous** and **Next** keys.  
While pressing the keys apply power to the unit.

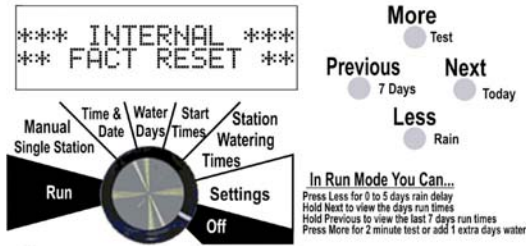

The display will show  
\*\*\* INTERNAL \*\*\*  
\*\* FACT RESET \*\*


and then

\*\*\* INTERNAL \*\*\*  
\*\* HIST RESET \*\*

The unit is now reset.

**Important: After the factory reset you must set the correct number of stations for your controller. Failure to do so will limit the controller to 6 stations.**


### Setting the number of stations:

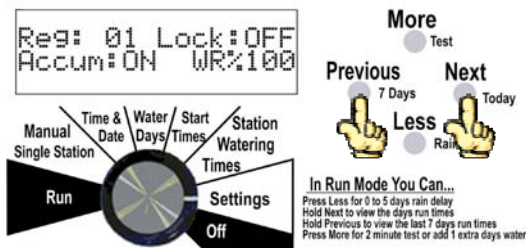

**Important: Do not set the number of stations to more than the controller has, you can not use more stations than the controller physically has installed.**

Turn the **Dial** to the position labeled *Settings*.

Simultaneously press the **Previous** and **Next** keys.  
The display will change to show the number of stations screen.

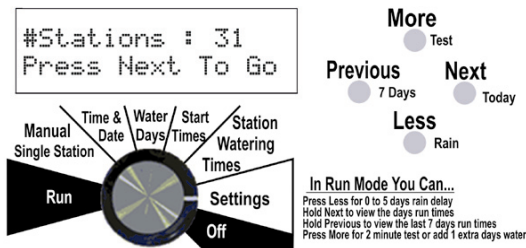

Use the **More** or **Less** keys to select the number of stations. ET-16 = 16 Stations, ET-24 = 24 Stations, ET-32 = 31 Stations.

Press the **Next** key to save the changes.