


Ultimo Advanced Function Guide October 6, 2005

AQUA
Conserve
ET-16/66u

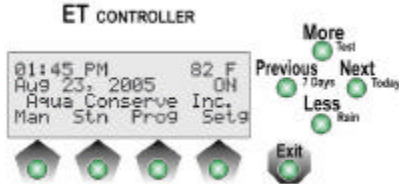


Keys:

- More:** Increase Value or select ON.
- Less:** Decrease Value or Select OFF.
- Next:** Next item to change.
- Previous:** Previous item to change.
- Exit:** Return to main screen or turn unit off.

Four Menu Keys: These keys change depending upon the screen that is displayed. The key's function are shown on the display above the key.

AQUA
Conserve
ET-16/66u

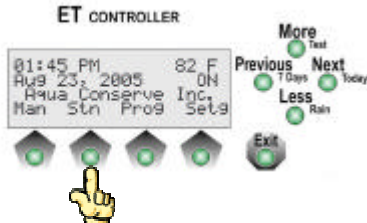

Establishment

The Establishment feature allows you to add additional water for a set number of days. This allows you to add more water to help establish new landscaping.

From the main screen press the **Menu Key** labeled *Stn*.

From the *Station Run Time* screen press the **Menu Key** labeled *Estab*.

Press the **More** or **Less** keys to select the station you wish to use the establishment feature.


Press the **Next** key to select the percentage more water.

Use the **More** or **Less** keys to select the percentage more water to add during the establishment period.

Press the **Next** key to select the number of days.

Use the **More** or **Less** keys to select the number of days to run the establishment feature.

AQUA
Conserve
ET-16/66u

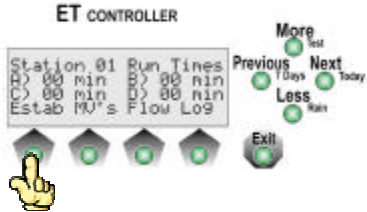

Note: After the selected number of days the station will revert back to normal operation.


AQUA
Conserve
ET-16/66u



To return back to programming station press the **Menu Key** labeled *RunTm*.

Press the **Exit** key to return to the main screen.

AQUA
Conserve
ET-16/66u

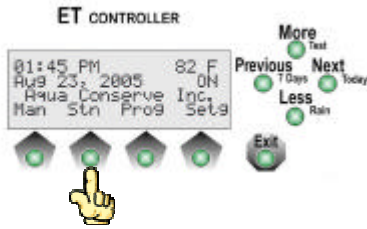

Master Valve / Pump Programming

From the main screen press the **Menu Key** labeled *Stn*.

From the *Station Run Time* screen press the **Menu Key** labeled *MV's*.

Use the **More** or **Less** keys to select the station.

Press the **Next** key to select *Master Valve 1, MVI*.

Press the **More** key to turn *Master Valve 1* on when the selected station is on. *MVI: ON*


Press the **Less** key to turn *Master Valve 1* off when the selected station is on. *MVI: OFF*

Repeat the above steps for each Master Valve and each Station.


Press the **Menu Key** labeled *RunTm* to return to the *Station Run Time* screen.

Press the **Exit** key to return to the main screen.


AQUA
Conserve
ET-16/66u

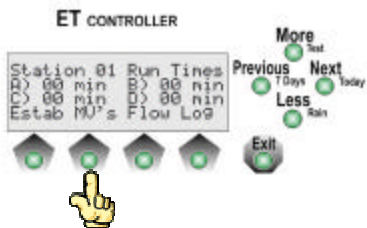

AQUA
Conserve
ET-16/66u

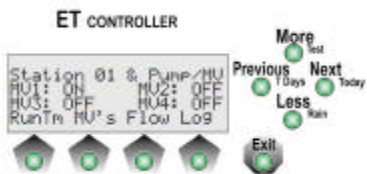

AQUA
Conserve
ET-16/66u

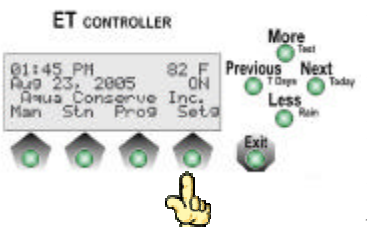

Flow Meter Calibration

From the main screen press the **Menu Key** labeled *Setg*.

From the settings screens press the **Menu Key** labeled *FloCal*.


Press the **More** or **Less** keys to adjust the calibration factor to match your flow meter.

Refer to the Ultimo User's Guide for common calibration factors.

Press the **Menu Key** labeled *Setg* to return to the settings screen.

Press the **Exit** key to return to the main screen.


AQUA
Conserve
ET-16/66u

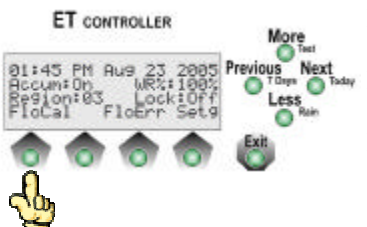

AQUA
Conserve
ET-16/66u



AQUA
Conserve
ET-16/66u

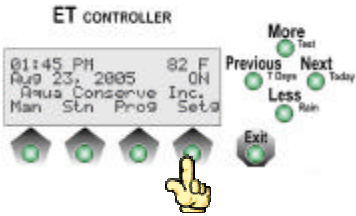

Setting Flow Errors

From the main screen press the **Menu Key** labeled *Setg*.

From the *Setting Screen* press the **Menu Key** labeled *FloErr*.

Use the **More** or **Less** keys to set the *High* flow error.

Note: If you set the HI flow error to 0% this will disable all flow errors.

Press the **Next** key to set the *Low* flow error.

Use the **More** or **Less** keys to set the *Low* flow error.


Press the **Next** key to set the *Max Leak* value

Use the **More** or **Less** keys to set the leak value.

Press the **Menu Key** labeled *Setg* to return to the *Setting* screen.

Press the **Exit** key to return to the main screen.


AQUA
Conserve
ET-16/66u

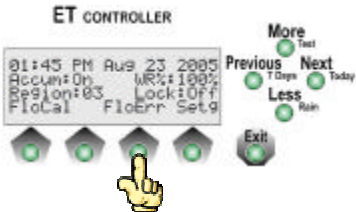

AQUA
Conserve
ET-16/66u



AQUA
Conserve
ET-16/66u

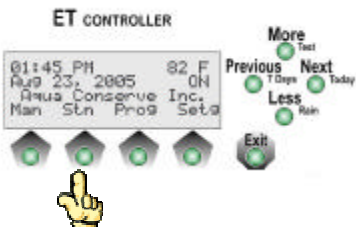

Station Runtime Log

From the main screen press the **Menu Key** labeled *Stn*.

From the *Station Run Times* screens press the **Menu Key** labeled *Log*.

Use the **More** or **Less** keys to select the station to review the runtime logs.

Press the **Next** key to move to the log.

Use the **More** or **Less** keys to move up and down through the 7 day station runtime log.


Press the **Next** key to reselect the station.

Use the **More** or **Less** keys to select other stations to view.


Press the **Menu Key** labeled *RunTm* to return to the *Station Run Times* screens.

Press the **Exit** key to return to the main screen.


AQUA
Conserve
ET-16/66u

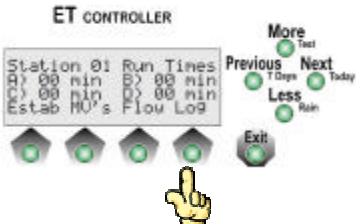

AQUA
Conserve
ET-16/66u

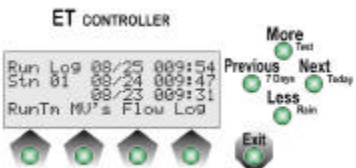

AQUA
Conserve
ET-16/66u

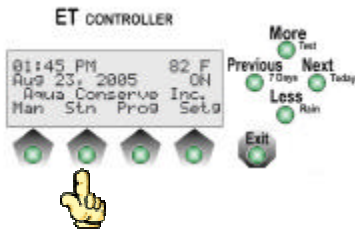

Flow Status

From the main screen press the **Menu Key** labeled *Stn*.

From the *Station Run Time* screen press the **Menu Key** labeled *Flow*.

Use the **More** or **Less** keys to select the station to review the flow status.

If there are flow errors they will be displayed in the status area. Once you have viewed the error it will be automatically cleared.

Press the **Next** key go to the status area.

Use the **More** or **Less** keys to change the status.

Status options

Learn Relearn the flow rate for the selected station


DISABLE Do not monitor flow for the selected station

Press the **Next** key to select additional stations to view or edit.


Press the **Menu Key** labeled *RunTm* to return to the *Station Run Time* screen.

Press the **Exit** key to return to the main screen.

AQUA
Conserve
ET-16/66u

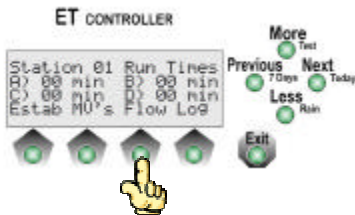

AQUA
Conserve
ET-16/66u

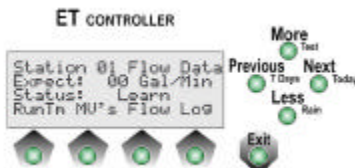

Please refer to the User's Guide for additional information.