


ET 6, 9 and 14 Factory Reset

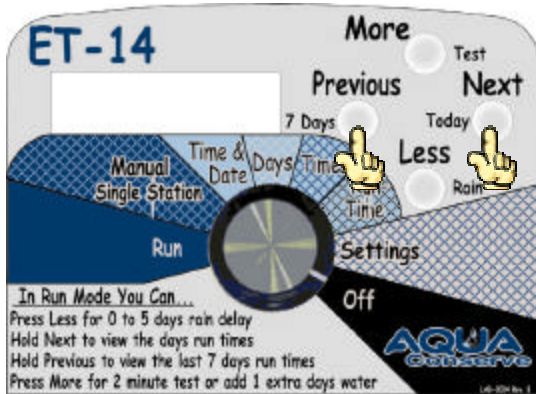


Resetting the Controller:

Important: The reset will clear all programming and settings.

Disconnect the battery from the controller.
Disconnect the AC power from the controller.

Simultaneously press the **Previous** and **Next** keys.
While pressing the keys apply power to the unit.

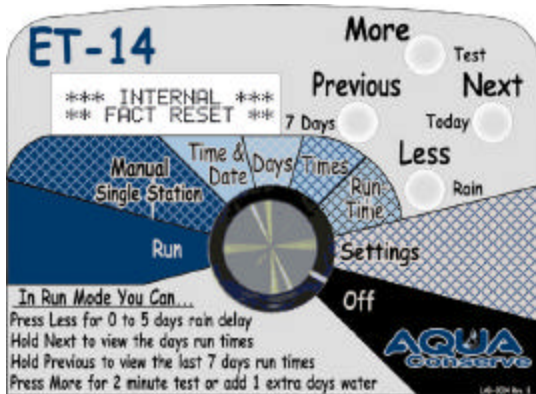

The display will show
*** INTERNAL ***
** FACT RESET **

and then

*** INTERNAL ***
** HIST RESET **

The unit is now reset.

Important: After the factory reset you must set the correct number of stations for your controller. Failure to do so will limit the controller to 6 stations.



Setting the number of stations:

Important: Do not set the number of stations to more than the controller has, you can not use more stations than the controller physically has installed.

Turn the **Dial** to the position labeled *Settings*.



Simultaneously press the **Previous** and **Next** keys.
The display will change to show the number of stations screen.

Use the **More** or **Less** keys to select the number of stations. ET-6 = 5 Stations, ET-9 = 8 Stations, ET-14 = 13 Stations.

Press the **Next** key to save the changes.